

INSTALLATION INSTRUCTIONS

⚠ WARNING

To properly install this warning light you should have a good understanding of automotive electrical procedures and systems, and proficiency in the installation of warning lights. **IF YOU DO NOT, PLEASE SEEK PROFESSIONAL ASSISTANCE.**

BEFORE INSTALLATION:

Estimated Time: 30 Minutes

Tools Needed: Hand saw
Sandpaper
Phillips Screwdriver

Bike Parts Needed: Gauge Cluster Front Cover
(3x) Phillips Screws

PRE-INSTALLATION INSTRUCTIONS:

1. Read all safety notes and mounting guidelines before installing the product. Verify that all parts listed under "In the Box" are present and complete.
2. Inspect the product for damage. DO NOT install the product if there is any damage. Contact the authorized retailer where you purchased it to initiate a warranty claim if there is damage.
3. Verify that all power supply and/or charging systems comply to the specified voltage limits for the light.

NOTES:

In using this guide, you agree J.W. Speaker is not responsible for any damage, misuse, or personal injuries. This document is intended as an educational guide only and does not make guarantees on any finished results.

To properly install this light you should have a good understanding of automotive electrical procedures and systems, and proficiency in the installation of lights. **IF YOU DO NOT, PLEASE SEEK PROFESSIONAL ASSISTANCE.**



⚠ **WARNING:** Cancer and Reproductive Harm - www.P65Warnings.ca.gov
⚠ **AVERTISSEMENT:** Cancer et effet nocif sur la reproduction - www.P65Warnings.ca.gov

PRODUCT WARRANTY:

If you have issues with a J.W. Speaker product, please contact the authorized retailer where you purchased it.

J.W. SPEAKER
Engineered. Lighting. Solutions.

INSTALLATION INSTRUCTIONS:

1. Ensure that you are working on a flat and solid surface of the same (or larger) size as the gauge cluster front cover. This will prevent warping or distortion that can cause cracking or damage to the cover.
2. You will first need to use a hand saw to remove the front tip of cover along the red line below.




We recommend making two different cut lines. Start on either the right or left side and saw to the center of the cover. Remove the blade and then resume sawing from the other side so that the saw lines meet in the middle.



When finished, the front cover should be in two separate pieces. You can discard this piece:



3. Next, thread the blade of the hand saw through the cover like the image below:

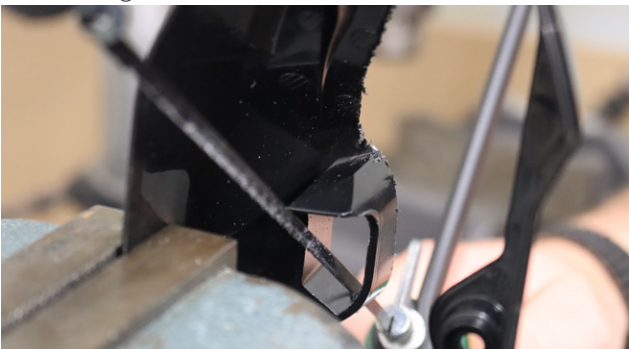

4. Cut off the bottom of the piece of the bracket that the saw is threaded through. The cover should look like this:



5. Use sandpaper to smooth the face of the areas you removed.



6. Re-use the 3 phillips screws that came with your bike to re-mount the front cover back onto your bike.